




Kit #5013  
Santa Fe White Trailer

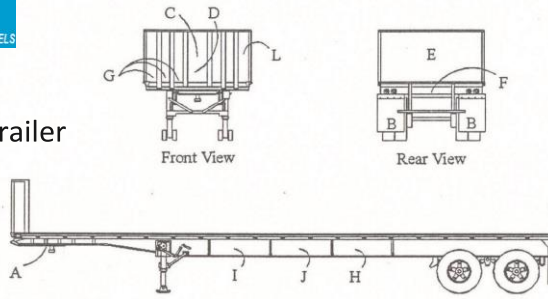

**Version #1** – Center small square SF logo on wraparound bulkhead without placard, location (C). Use black WONZ numbers cut to fit between ribs, location (D).

**Version #2** - Mount square plastic placard approximately 1/16" from top of bulkhead front, centered at location (C). Place large, square SF logo on placard. Position small SFTZ number, starting at left edge of bulkhead front, and cut to fit between ribs, location (G). Left (driver's) side - Place small, square SF logo on frame location (H). Use large SFTZ (trimmed from number) at location (I) and number at location (J). Right (curb) side – Place SF logo at rear, SFTZ in front, and trailer number in the middle.

**Both versions** - paint mudflaps black and place white "Santa Fe" centered on mudflap, location (B). Use round dolly wheel landing gear, omit tool box and spare tire rack. Place Trailmobile logo on both sides, location (A).